

# EXCELLTEL CDX-PA001

## MANUAL

### Feature List

Caller ID features support 38 Calls message.  
Ringer Hi/Lo Switchable.  
Ringer Hi/Lo Switchable.  
“O U T OF AREA” and “PRIVATE” with icon indicator.  
Ringer Hi/Lo with switch control.  
Dial back feature.  
Last Number Redial.  
New Call Icon indicator.  
Repeat call Icon indicator.  
H.F Speaker phone

### SETTING UP

#### (1). Installation

Warning - Disconnect the line cord from the wall socket before inserting or changing the batteries.

Open the battery cover located under the unit and insert two (AAA) batteries. Please note the correct positioning (+ and -). Connect the telephone Line Cord to the Line Socket. The LCD display is turned on.

#### BATTERY PRECAUTIONS

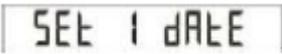
Follow these precautions when using batteries in this device:

1. Use only LR-06 (SUM4,AAA) of battery.
2. Be sure to install the battery in correct polarity. Reversed batteries may cause damage to the device.
3. If the device is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.
4. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacture's directions.)

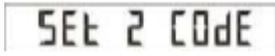
#### 2).Setting Items. (All setting items will be set at the on hook status)

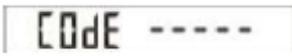
Press “SET” in on-hook status, LCD will prompt  . Then use **UP/DOWN** to select setting items.

##### a) Setting Date/Time

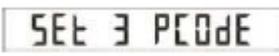
When LCD prompts  . Press SET to enter the DATE/TIME setting. When the Date digit flashing, use **UP/DOWN** to set the date, and then put “SET” to confirm. When date set finished, then use the same way to set the hour and minute. When Date/Time setting finished, the LCD will prompt the correspondent days of the week.

### b) Setting Area Code

When LCD prompts  , Press "SET", LCD will prompt

 , Press SET to enter, When first – Flashing( if the area code already exists, then the first number of the area code will flash). Then use **UP/DOWN** to select number from 0-9, after first digit setting press SET to enter the second digit setting. The rest can be done by the same way.

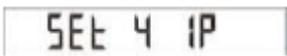
### c) Setting Out Area Code

When LCD prompts  , Press "SET", LCD will prompt

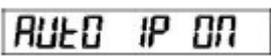
 , Press SET to enter, When first – Flashing( if the out area code already exists, then the first number of the out area code will flash). Then use **UP/DOWN** to select number from 0-9, after first digit setting press SET to enter the second digit setting. The rest can be done by the same way.

When the Out area code was set, if the number is more than 6 digits when dial the pre-dialing number, recording number or incoming number, it will add the out area number automatically. If you dial the outgoing number then the out area code is no necessary. When IP is used, then it will dial the out area number then dial the IP number.

### d) Setting IP

When LCD prompts  , press SET to enter, LCD will prompt

 , and OFF will flash, then press **UP/DOWN** to select on/off and then press SET to confirm.

When come to  , press SET to enter, LCD will prompt

 , then press number button to input the number corresponding with IP service of your local telecom company. Then press SET to confirm.

When IP was set, in on-hook status, if the number dialed begin with 0, then it will add the IP number automatically.

### e) Setting P/T.

When LCD prompts  , press SET to enter, then use **UP/DOWN** to select T/P dialing method.

### f) Setting Alarm

When LCD prompts  , press SET to enter, then the LCD will

prompts **1 00-00 OFF**, the first number is group number, maximum 3 group alarms, use **UP/DOWN** to select group number. The middle 4 digit is alarm time, after select the group number press SET to confirm then modify alarm time, press **UP/DOWN** to choose the first digit then press set to confirm, then use the same way to finish other digit modification. When time is set, the last word OFF will flash then press **UP/DOWN** to adjust the status to off/on.

### G) Setting LCD Brightness

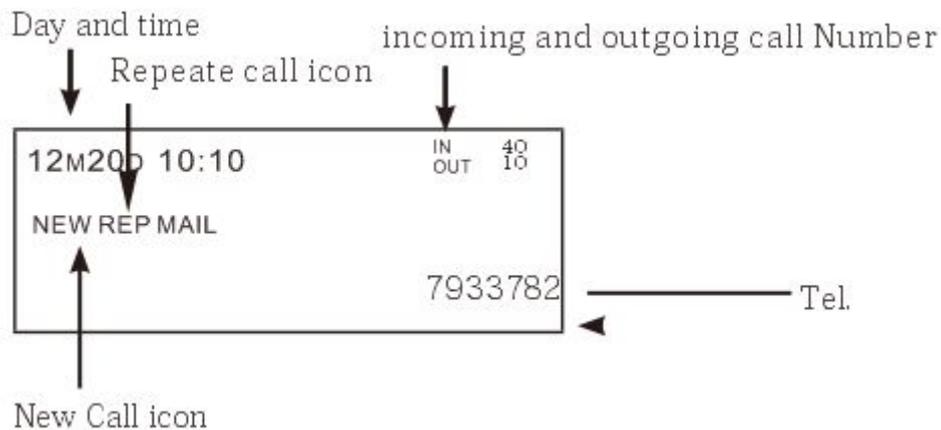
When LCD prompts **SET 7 LCD**, press SET to enter, then the LCD will display **Lcd 3** (the default is level 3), then press **UP/DOWN** to adjust the LCD brightness. Total 5 level selectable, then press SET to confirm.

## USING AS A CALLER ID TELEPHONE

### Caller ID service

Caller ID allows the caller's phone number to be shown on the display before you answer the call. In order to use this feature, you must first subscribe to Caller ID service with your telephone company. The name of this service may vary depending on your telephone company.

When you receive a call – the phone number appears on the display with the day and time as shown in the following example.



The day and time information is received from your telecom company. If the call came from a different time zone, it will still show the time in your area.

### 1.) Status indications

a.) Out of Area (display with icon only)

The call is made through a telephone company which does not offer Caller ID service (including long distance and international calls).

b.) Private call (display with icon only)

The Caller did not want the number to be shown on the Caller ID unit.

## 2.) Viewing the Caller ID list

This unit automatically stores the latest calls received. Press **UP** button, the display shows the previous call. Press **DOWN** button, the display shows the newer Call.

## 3.) Erasing data from the Caller ID list

This unit maintains the last 38 calls in memory. If there is a new call after those 38 calls, the first call will be automatically erased and new call will be stored. (First in first out).

a.) To erase one stored number at a time

1. Press **UP/DOWN** button to display the data you want to erase.
2. Press **DEL** button once, the displayed data will be erased.

b.) To erase the entire list at once

1. Press **UP/DOWN** button to display one of calls.
2. Press and hold **DEL** button for more than 3 seconds, the entire list is erased

## 4.) Calling back a number from the Caller ID list

Pick up the handset or press H/F button then press **UP/DOWN** button to select the number you wish to dial, Then press Redial button to dial out the selected Number.

## 5.) PAUSE/VIP function

a) When you dial or pre-dial the number, press this button, it will function as Pause.

b) When you review the incoming records, it can work as VIP function. When reviewing the incoming records, press **PAUSE/VIP** button, then this incoming record can be set as VIP. VIP number cannot be deleted when they are reviewed except the deleted button was hold over 3 seconds.

If all incoming calls are set as VIP calls, then the earliest one will be delete automatically.



**1095 Budapest, Mester utca 34.**      **1141 Budapest, Fogarasi út 77.**  
Tel.: \*218-5542, 215-9771, 215-7550,      Tel.: \*220-7940, 220-7814, 220-7959,  
216-7017, 216-7018 Fax: 218-5542      220-8881, 364-3428 Fax: 220-7940  
Mobil: 30 940-1970, 20 949-2688      Mobil: 30 531-5454, 30 939-9989

E-mail: [delton@delton.hu](mailto:delton@delton.hu) Web: [www.delton.hu](http://www.delton.hu)

**[www.excelltel.hu](http://www.excelltel.hu)**