

# CARTY-CD4

**WARNING! At the first usage, do the self-generating code.**

## ▶ BATTERY AND OPENING THE REMOTE CONTROL [3]

Open the case with a screwdriver removing fixing screw **A**, and with a flat head screwdriver lever the box open by inserting it in the slit **B**. When the battery is replaced, check the polarity. Keep the battery away from children. Dispose of the old battery in the correct manner and according to your local regulations.

## ▶ CODE GENERATION [1]



The first button of remote control will already have a code assigned (created by NOLOGO during testing) and the second button has no code assigned. This operation creates new codes for both buttons and cancels the previous codes.

- Press button no. 1 and then button no.4 and keep them pressed.
- The light **D** flashes slowly.
- Wait 8 seconds until the light is flashing faster.
- Let go of button no.1 and after a moment button no. 4.

## ▶ HOW TO LEARN A CODE [1-2-3]

- Push the button 1 and after a while the button 4 and leave them in the same time.
- The led **D** is flashing for 5 seconds, and this is the time to memorise the original code.
- During this time press and keep pressed one button where you want to memorize the code (you can choose from the button 1,2,3,4).
- Press and keep pressed the button of the original remote control **X** as shown in the picture no.2, pay attention that the antenna of the original remote control **X**, usually in front of the remote control (check it by opening the remote control) should be as near as possible of the antenna **F** of the CARTY-C4d.

The light **D** flashes rapidly for a while and then it flashes regularly to confirm that the code has been copied.

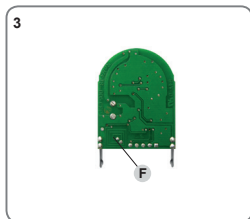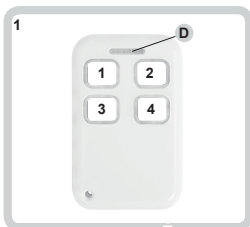

Technical features	
Power supply	Battery 12V 23A
Stand-by consumption	≤ 400 nA
Frequency	433,92 Mhz
Type of modulation	OOK
Coding	Fino a 80 bit
Working temperature	- 20 °C ++ 55 °C
Dimensions	37 x 65 x h15 mm

1141 Budapest, Fogarasi út 77.      1095 Budapest, Mester u. 34.  
Tel.: \*220-7940, 220-7814, 220-7959.      Tel.: \*218-5542, 218-9771, 218-7550,  
220-8881, 364-3428 Fax: 220-7940.      218-7017, 218-7018 Fax: 218-5542  
Mobil: 30 531-5454, 30 939-9989      Mobil: 30 940-1970, 30 959-0930

[www.delton.hu](http://www.delton.hu)

E-mail: [info@delton.hu](mailto:info@delton.hu) Web: [www.delton.hu](http://www.delton.hu)