 
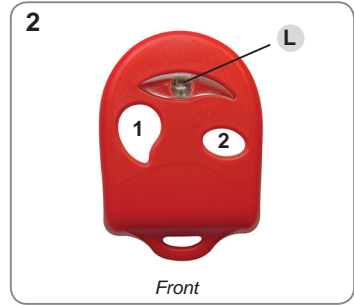 


EKO-C

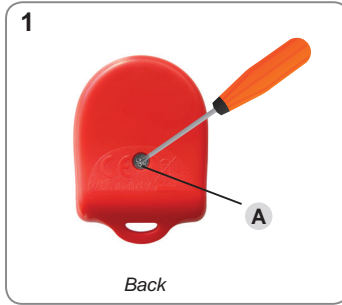

WARNING! At the first usage, do the self-generating code.

► BATTERY AND OPENING OF THE REMOTE CONTROL [1]

Open the case with a screwdriver removing the screw **A**. When the battery is replaced, check the polarity. **Keep the battery away from children. Dispose of the old battery in the correct manner and according to your local regulations.**

► CODE GENERATION [2]

 
The first button of remote control will already have a code assigned (created by NOLOGO during testing) and the second button has no code assigned. This operation creates new codes for both buttons and cancels the previous codes.

- Press button no.1 and then button no.2 and keep them pressed.
- The light **L** flashes slowly.
- Wait 8 seconds until the light is flashing faster.
- Let go of button no.1 and after a moment button no.2

Now every button has a generated code from millions of different combinations

► HOW TO LEARN A CODE [3-4]

- Press button no.1 and then button no.2 and keep them pressed.
- The light **L** starts flashing
- Release the button which is not to be copied on to.
- Press the original transmitter's button **X** which you want to copy
- Keep the two remote controls close to each other as shown in picture no.4, so that the antenna of the original remote control **X**, usually in the bottom part of the remote control (check it by opening the remote control) should be as near as possible to the receiving part **C** of the EKO-C.

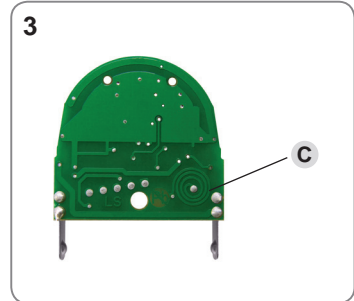

The light **L** flashes rapidly for a while and then it flashes regularly to confirm that the code has been copied.

Delton

1095 Budapest, Mester utca 34.
Tel.: *218-5542, 215-9771, 215-7550,
216-7017, 216-7018 Fax: 218-5542
Mobil: 30 940-1970, 30 959-0930

1141 Budapest, Fogarasi út 77.
Tel.: *220-7940, 220-7814, 220-7959,
220-8881, 364-3428 Fax: 220-7940
Mobil: 30 531-5454, 30 959-0930

E-mail: delton@delton.hu Web: www.delton.hu

www.delton.hu