



T555ML

rev.0104

Audio
door entry system
4+'n' installation

Stadio Plus

Instructions manual

INTRODUCTION

1

First of all we would like to thank and congratulate you for the purchase of this product manufactured by Golmar.


The commitment to reach the satisfaction of our customers is stated through the ISO-9001 certification and for the manufacturing of products like this one.

Its advanced technology and exacting quality control will do that customers and users enjoy with the legion of features this system offers. To obtain the maximum profit of these features and a properly wired installation, we kindly recommend you to expend a few minutes of your time to read this manual.

SYSTEM CHARACTERISTICS

- Audio system with 4 + N wires installation.
- Just 1 TF-104 transformer (12Va.c., 1.5A) will be required for each door panel.
- Electronic call in systems with EL550 or EL551 sound modules and buzzer call in systems with EL554 sound module, with acoustic acknowledgement signal.
- a.c. lock releases activation.
- Up to three telephones in the same apartment.
- In systems with EL551 sound module for buildings with several access doors:
 - wTwo selectable electronic call types at the door panel.
 - wLuminous and acoustic busy channel acknowledgement signals.
 - wTimed door open activation.

DOOR PANEL DESCRIPTION

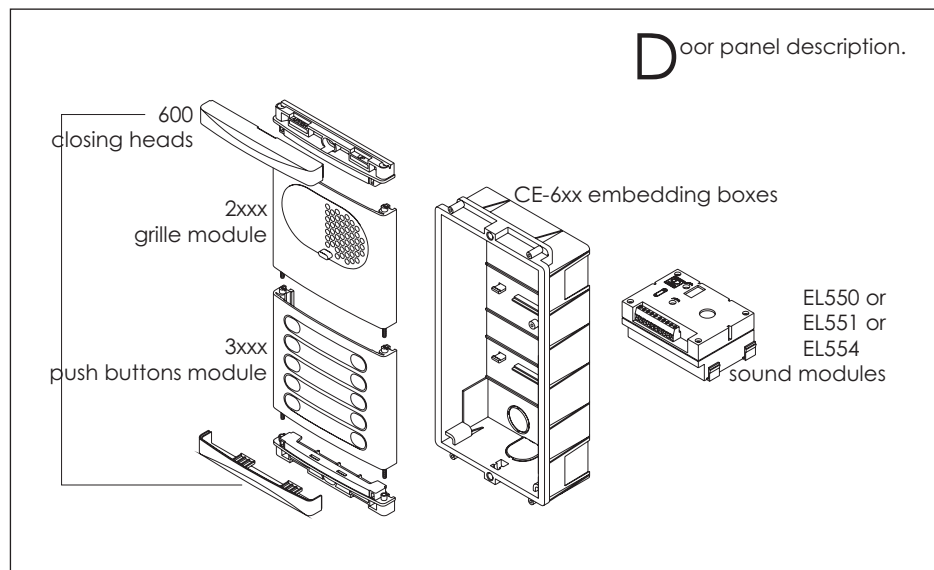


2

DOOR PANEL INSTALLATION

E

embedding box positioning.

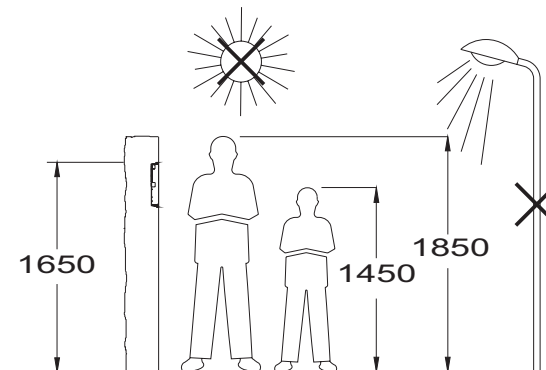


The upper part of the door panel should be placed at 1,65m. height roughly. The hole dimensions will depend on the number of door panel modules.

Modules Model	1	2	3
	CE610	CE620	CE630
W	125	125	125 mm.
H	140	257	374 mm.
D	56	56	56 mm.

The door panel has been designed to be placed under most of the environmental conditions. However it's recommended to take additional cautions like rainproof covers.


P

reparing the cables entry.

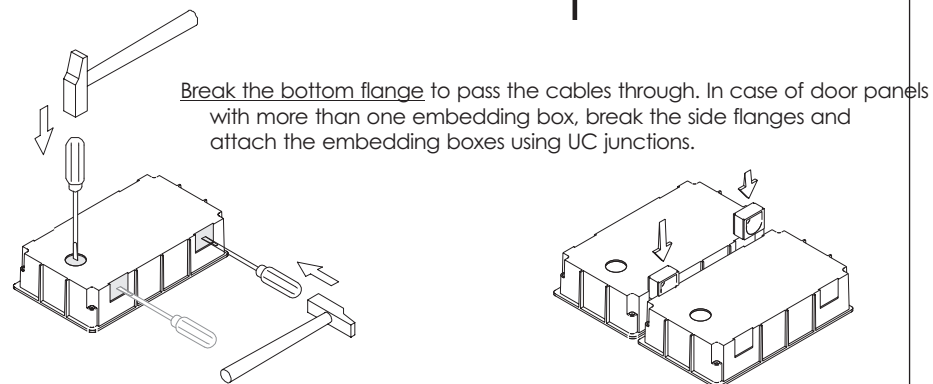



DOOR PANEL INSTALLATION


3

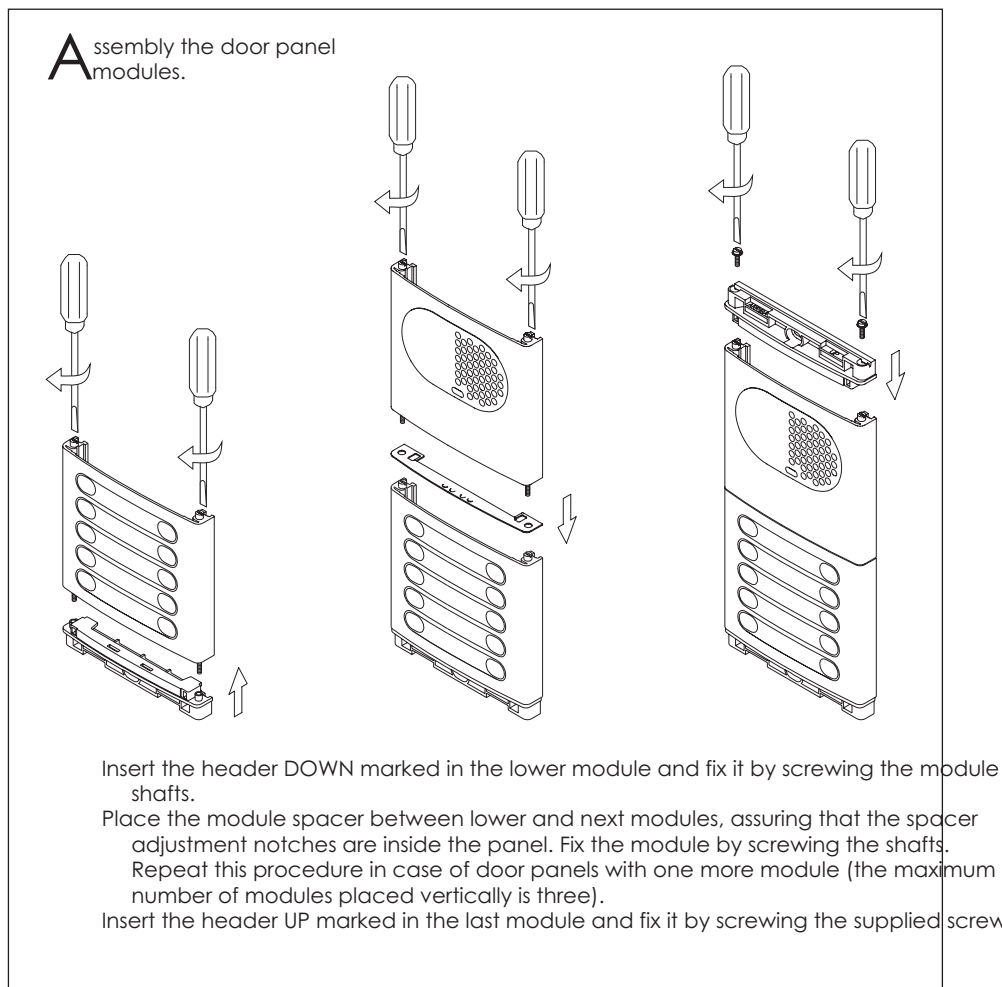

4



DOOR PANEL INSTALLATION

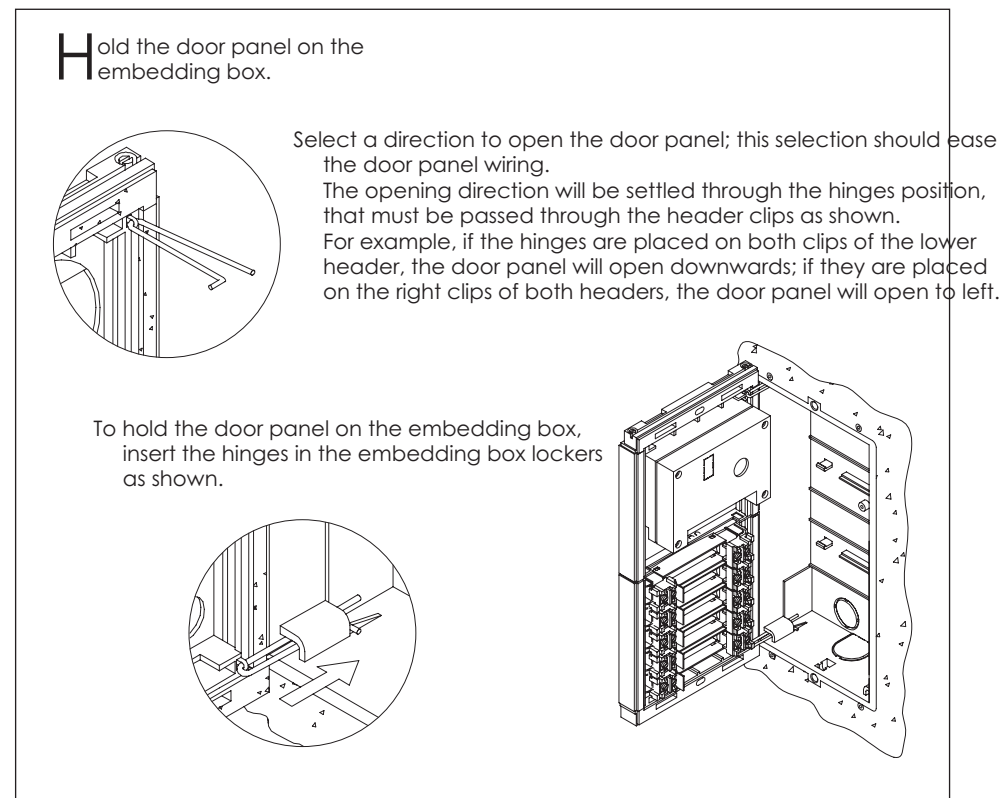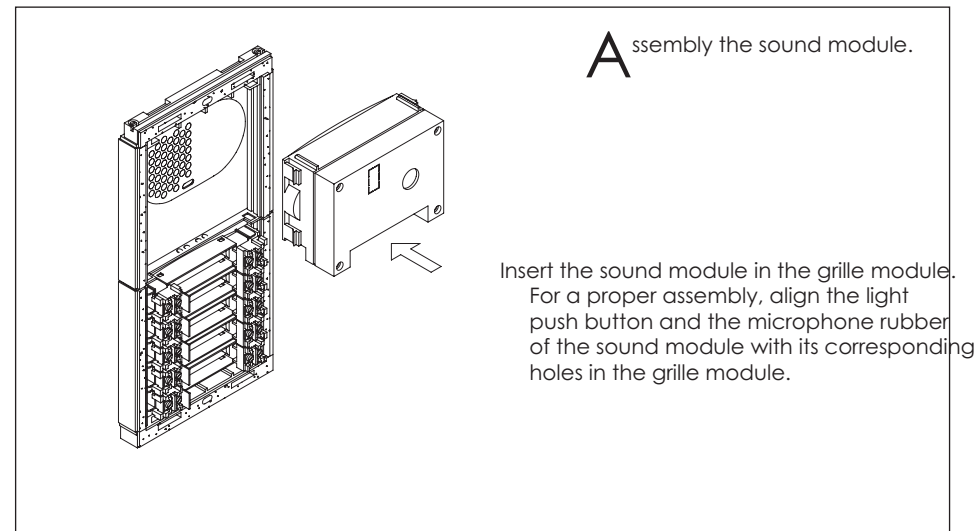

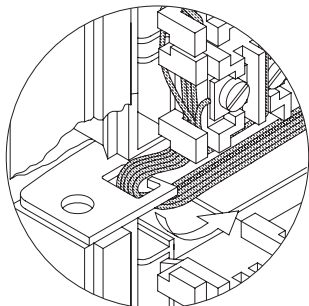
Push buttons wiring.

For a quality finish, pass the push buttons wires through the spacer hole of the closest module.


Twist the independent call wires as shown.

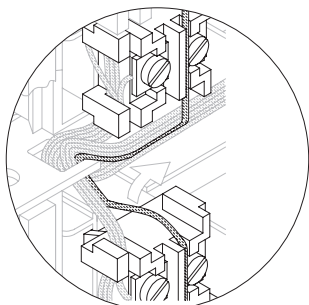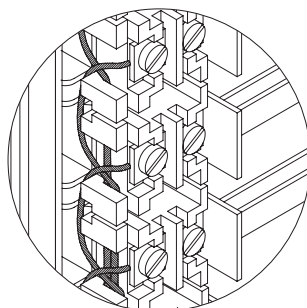

IMPORTANT: link the push buttons common terminal of all the modules. The common terminal of the push buttons contained in a module are linked from factory. Connect this terminal to CP terminal of the sound module.

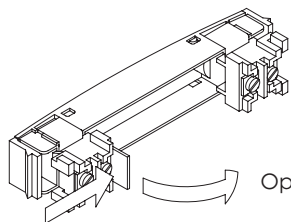Place the nameplate labels.

Open the label holder.


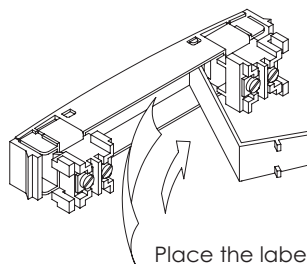


Place the label and close.

Final adjustments.

Once the nameplate labels are placed, wire the lamps from different modules and connect them to terminals L1 and L2 of the sound module, as it's shown on the installation diagrams.

If after starting the system it's considered that the audio volume isn't correct, proceed with the necessary adjustments as shown.

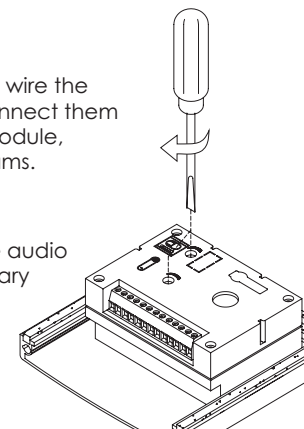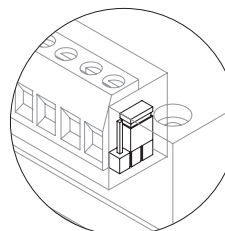
**C**all type selection.


EL551 sound modules for systems with several access doors have a jumper placed on the right side of the terminal connector. This jumper allows to select between two different call types, allowing the user to distinguish which door panel is calling.

Close the door panel.

Fix the door panel by using the supplied screws.

Finish the door panel assembly by pressing the closing heads.

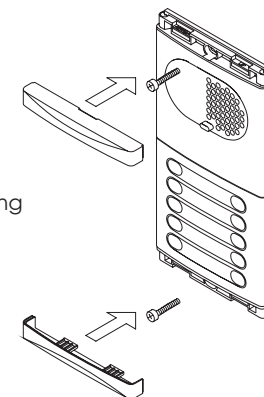


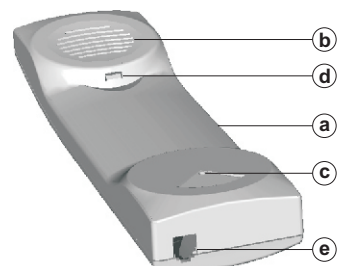


Description of the T-900 and T-910 telephones.

- a. Telephone handset.
- b. Speaker grille.
- c. Microphone hole.
- d. Subjection hole.
- e. Telephone cord connectors.
- f. Door release push button.
- g. Hook switch.

To open the telephone insert a plain screwdriver into the slots and rotate it as shown.

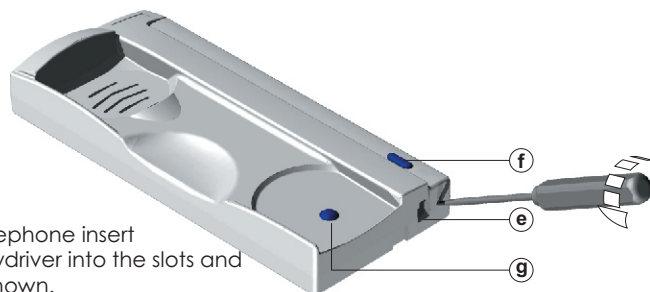

Avoid to place the telephone near to heating sources, in dusty locations or smoky environments. The telephone can be fixed using an electrical embedding box or directly on the wall, as shown on the picture. If the telephone will be installed directly over the wall, drill two holes of Ø6mm. on the specified positions, using 6mm. wallplugs and Ø3,5 x 25mm. screws.

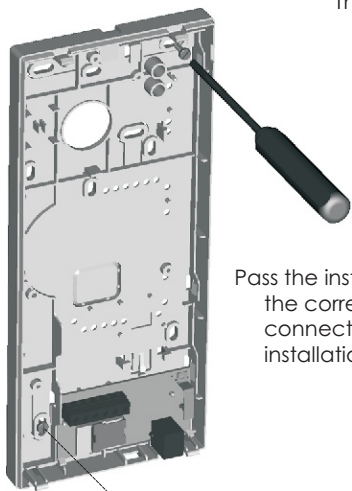


Pass the installation wires through the corresponding hole and connect them as shown on the installation diagrams.




Close the telephone as shown on the picture. Once the telephone is closed, connect the handset using the telephone cord and put it on the cradle.

Installing the TF-104 transformer.

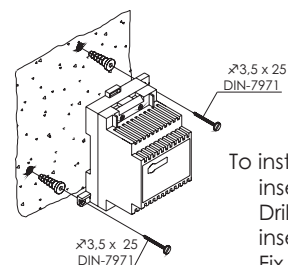

The transformer must be installed in a dry and protected place. It's recommended to protect the transformer by using a thermo-magnetic circuit breaker.

To install the transformer directly on the wall, insert the fixing flanges. Drill two holes of Ø6mm. and insert the wallplugs. Fix the transformer with the specified screws.

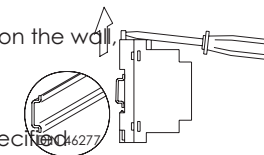


The transformer can be installed on a DIN guide (3 units) simply pressing it. To disassemble the transformer from the DIN guide, use a plain screwdriver to lever the flange as shown on the picture.

LOCK RELEASE INSTALLATION

Lock release installation.

If the lock release will be installed in a metal door, use a Ø3,5mm. drill and tap the hole. In case of wood door, use a Ø3mm. drill.

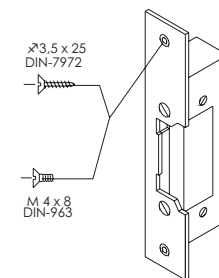


STARTING RECOMMENDATIONS


- Do not use excessive force when tightening the transformer connector screws.
- Install the equipment without the power connected. Disconnect from power before any system modification. Check that the input voltage is lower than 230Va.c.
- Before to connect the system, check the connections between door panel and telephones, and the transformer connection. Do always follow the enclosed

INSTALLATION DIAGRAM

9

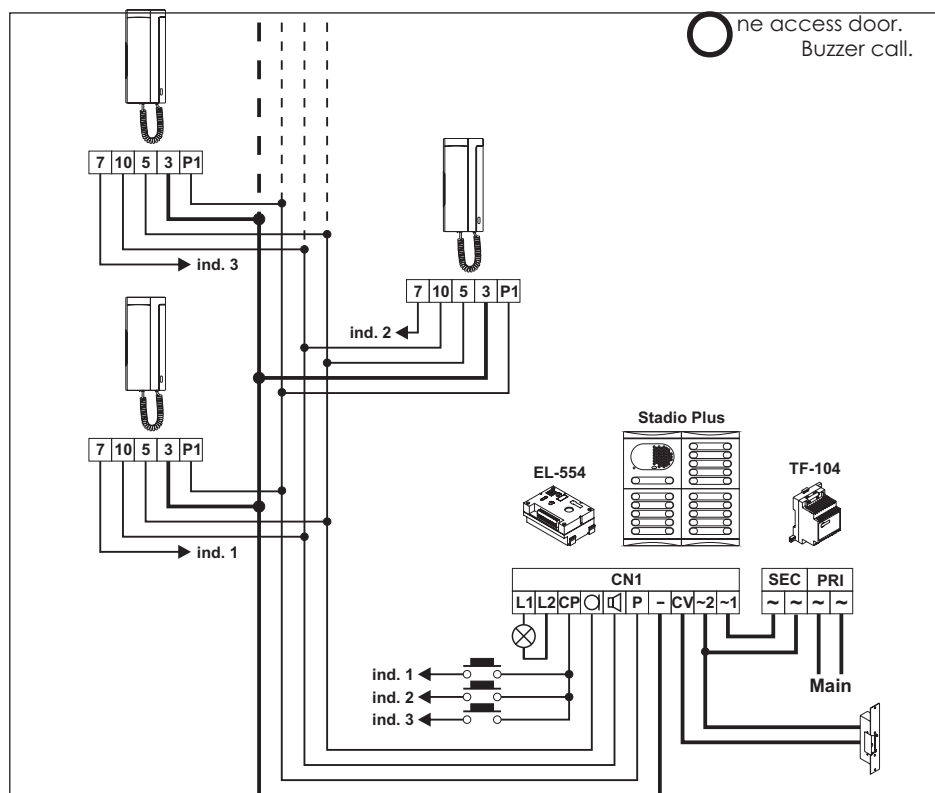

The lock release can be activated at any moment by using an external push button, that must be connected between 'L' and 'P' terminals of the sound module. This function will allow to exit from the building being not necessary the use of a key.

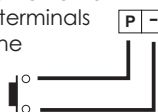


Sections chart		
Terminal	100m.	300m.
5, 0, 10, 1, P, P1	0,25mm ²	0,50mm ²
~, 3, 7, ind	0,50mm ²	1,00mm ²
~1, ~2, CV	1,00mm ²	2,50mm ²

For longer distances than the specified contact with your distributor.

10

INSTALLATION DIAGRAM

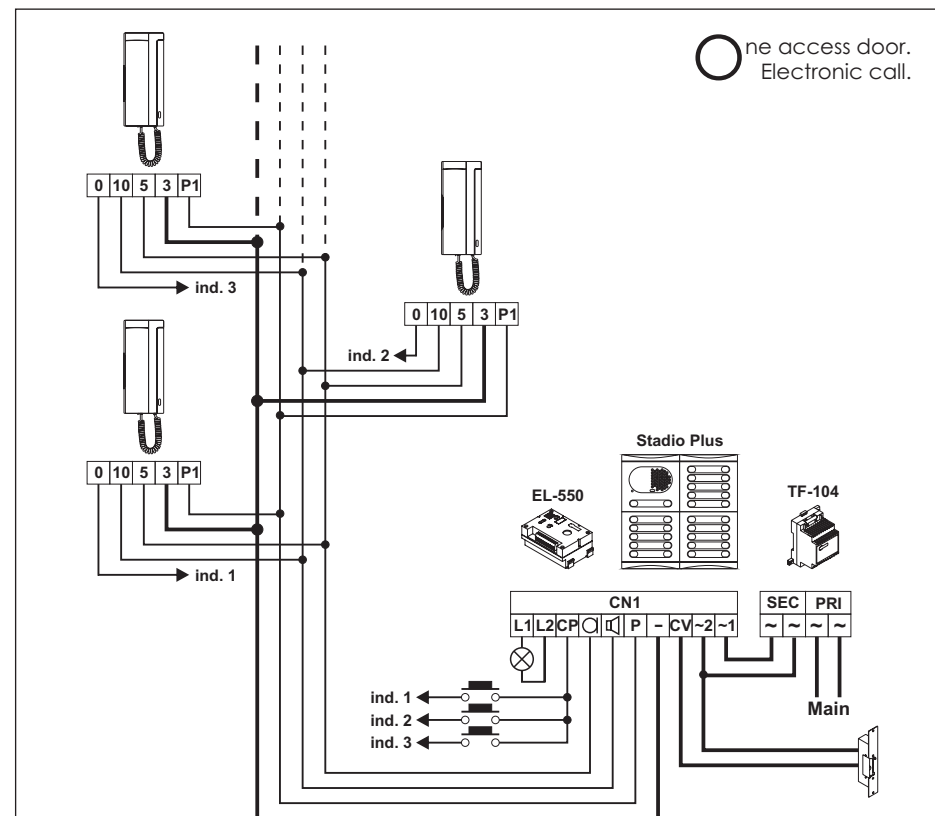


The lock release can be activated at any moment by using an external push button, that must be connected between 'L' and 'P' terminals of the sound module. This function will allow to exit from the building being not necessary the use of a key.



Sections chart		
Terminal	100m.	300m.
0, ind, 5, 0, 10, 1, P, P1	0,25mm ²	0,50mm ²
~, 3	0,50mm ²	1,00mm ²
~1, ~2, CV	1,00mm ²	2,50mm ²

For longer distances than the specified contact with your distributor.

Several access
doors. Electronic

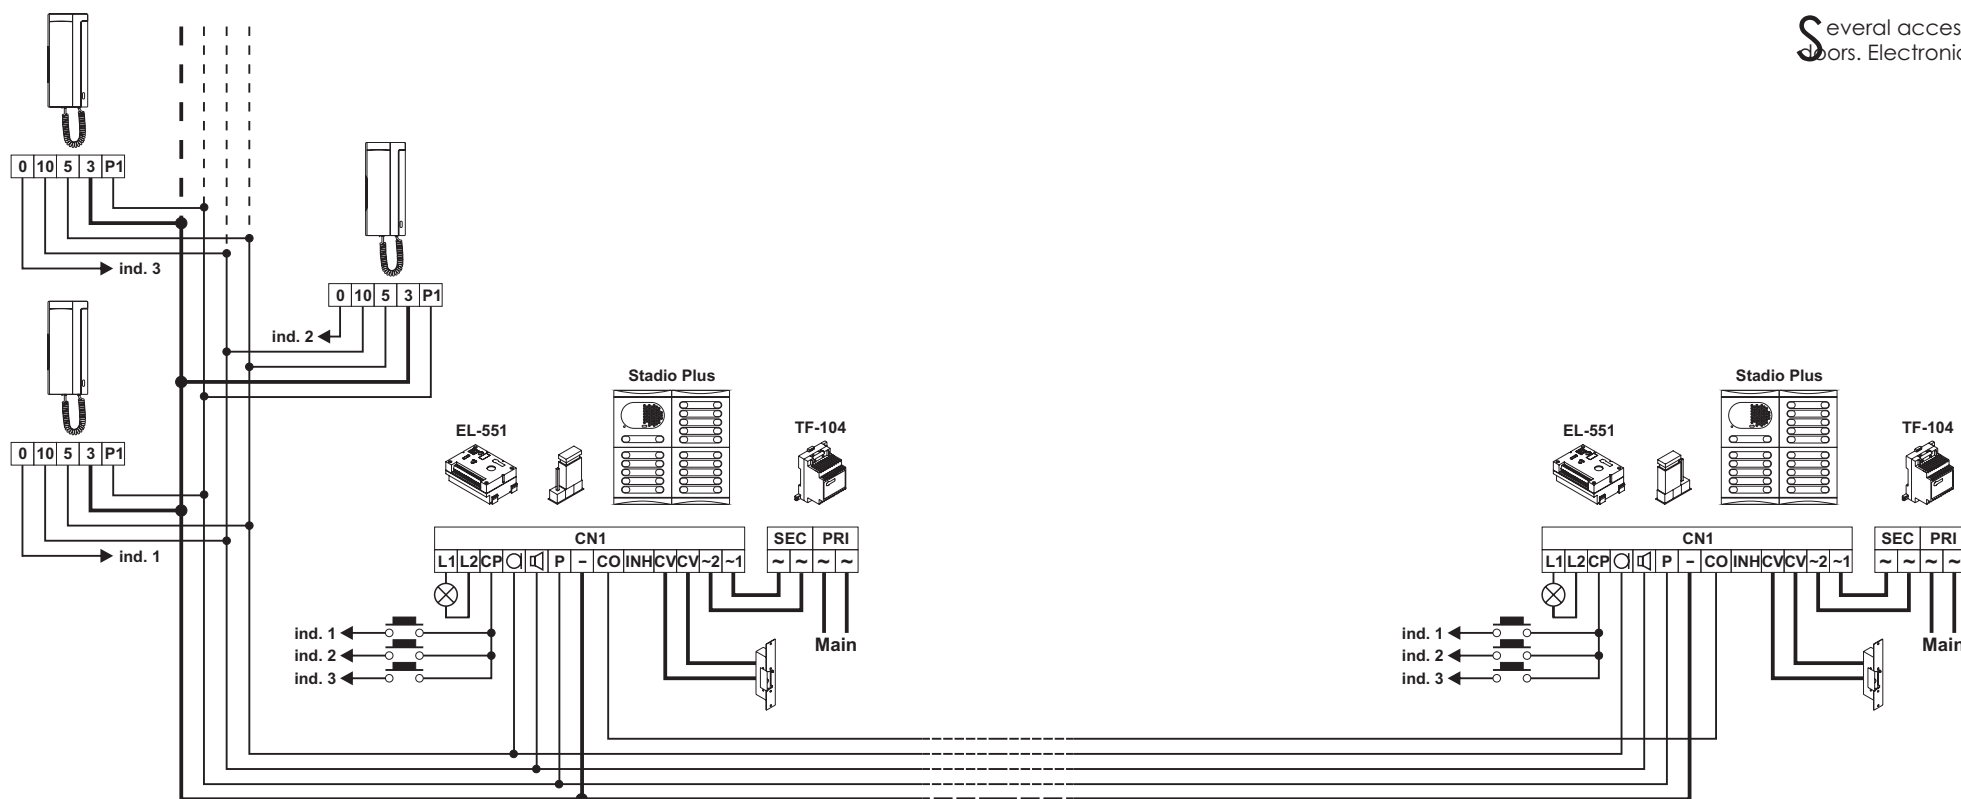


The lock release can be activated at any moment by using an external push button, that must be connected between '~1' y 'CV' terminals of the sound module. This function will allow to exit from the building being not necessary the use of a key.



Terminal	Sections chart	
	100m.	300m.
0, ind, 5, 10, P, P1, CO	0,25mm ²	0,50mm ²
~, 3	0,50mm ²	1,00mm ²
~1, ~2, CV	1,00mm ²	2,50mm ²

For longer distances than the specified contact with your distributor.

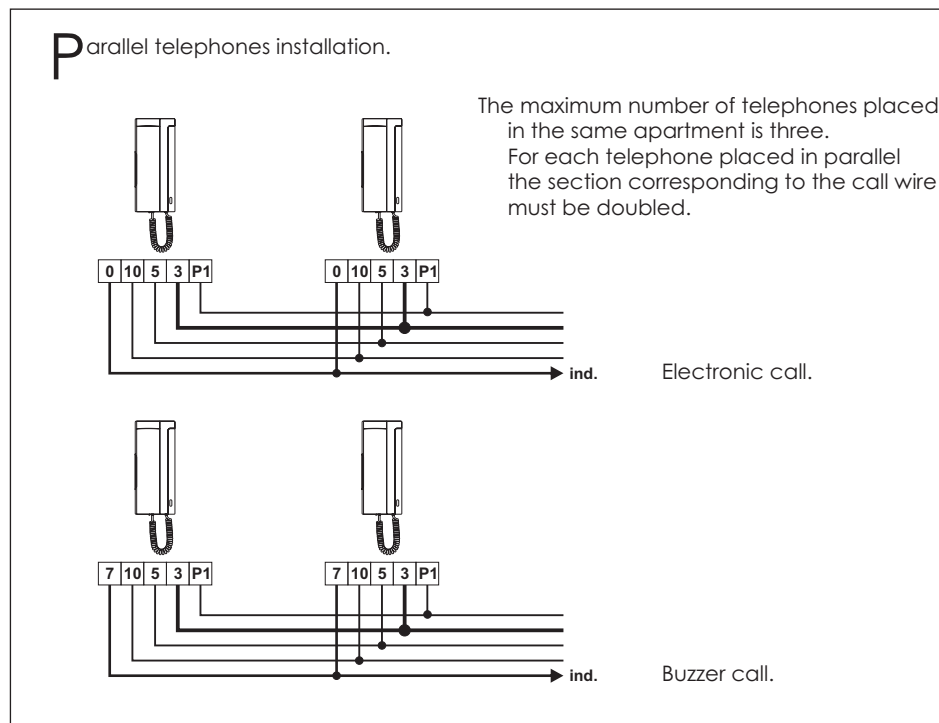

SYSTEM OPERATION

- To make a call the visitor should press the push button corresponding to the apartment he wishes to contact. An acoustic tone will be heard confirming the call as the push button is pressed. At this moment the call will be received at the telephone in the dwelling.
- In systems with several access doors, the other(s) door panel(s) will be automatically disconnected, and the light push button will change to red color: if a visitor tries to call from other door panel an acoustic tone will be heard confirming the system is busy. If the call is not answered in 30 seconds, the system will be freed.
- To establish communication pick up the telephone handset. In systems with several access doors, the communication will last for one and a half minutes or until the handset is replaced. Once the communication has finished the system will be freed.
- To open the door, press the door release push button at any moment.
- In systems with several access doors, the door open function can be operated during call and communication progresses: with one press, the door release

- Nothing operates.
 - w Check the output transformer voltage between SEC terminals: it should have 12 to 17Va.c. If not, disconnect the transformer from the installation and measure again. If it's correct now, it means there is a short circuit in the installation: disconnect the transformer from mains and check the installation.
- Inappropriate audio level.
 - w Adjust the level volumes as shown on page 6. In case of feedback, reduce the audio levels until feedback fade out.
- Door open function no operates.
 - w Remember that in systems with several access doors (EL551 sound modules), this function is only available during call and communication progresses.
 - w Disconnect the lock release from the sound module and short-circuit terminals '-' and 'P': at that moment the output voltage between terminals 'CV' and '~2' (in case of EL550 or EL554 sound modules) or between terminals 'CV' (in case of EL551 sound module) should be 12Va.c. If it's so check the lock release, its wiring and the wiring of the terminal 'P' from the sound module to the telephones. If these tests don't solve the problem, replace the sound module.
- No telephones receive the call or acknowledgement call signal is not reproduced.
 - w Check that the push buttons common terminal are correctly connected to the 'CP' terminal of the sound module.
- The door panels don't change to busy status.
 - w From the moment a call is made in one of the door panels, the voltage between '-' and 'CO' terminals should be lower than 3Vd.c. If not, check the continuity of the 'CO' wire.
- Once a communication is finished the system remains on busy status.
 - w If the busy status remains for a three minutes period, even if the handset of the called telephone is on the cradle, check that all the telephones are correctly replaced.
- The acknowledgement busy signal is not reproduced.
 - w When someone tries to make a call during busy status, the light push button should change its color and busy signal should be heard at the door panel. If the called telephone is not a T-900 model, and is not correctly replaced or it